


(GB) EXTRACTOR OR FILTERING HOOD INSTALLATION

For installation: The minimum distance between the support surface of the recipients on the cooking device and the lowest part of the hood must not be less than 30 cm in the case of electric cookers and 40 cm for gas or combination cookers (65 cm from controls as per enclosed drawing). If the installation instructions for the gas cooker specify a greater distance, this must be taken into account.

⚠ WARNING: The exhaust pipe and clamps are not supplied and must be bought separately.

⚠ WARNING: Very heavy product; hood handling and installation must be carried out by at least two persons. We recommend that you contact a qualified engineer to have the hood installed.

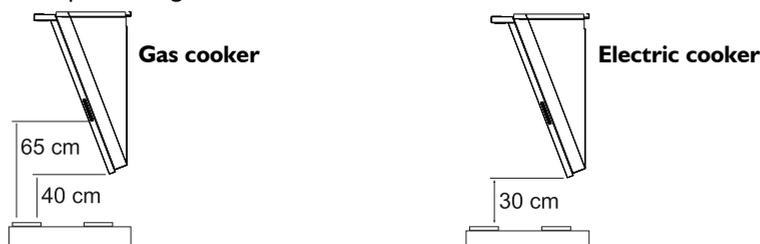

Also consult the drawings on the first pages of this booklet, with alphabetical references in the description.

Always comply with the instructions and recommendations given in this manual. The Manufacturer declines all liability for any faults, damage or fires caused by the appliance as a result of failure to observe the instructions and recommendations given in this manual.

If the hood is used in FILTER version it is used without an exhaust fume discharge pipe.

Fumes and vapour are recycled through the deflector **F (IIF)**.

If the product is to be used in EXTRACTOR version, it is necessary to provide an exhaust pipe from the top outlet B to the external outlet vent.

In this case a collar (**IIA**) must be fitted on the exhaust outlet B and the carbon filter must be removed.

A telescopic flue is also available (as an accessory).

Preliminary information for installing the hood:

Expansion plugs are provided to secure the hood to most types of ceilings. However, a qualified technician is needed to make sure that the plugs are suitable for your ceiling. The ceiling must be strong enough to take the weight of the hood.








Only for some models





An aesthetic flue can be purchased as an optional accessory. Please check with your After-sales Service to find out whether or not your model has this option.

In order to ensure that it is installed in the most suitable way, it is recommended that you only fit the hood after purchasing the flue.

Disconnect the power supply at the domestic main switch before carrying out electrical connections.

- Apply the (adhesive) rubber strips **C** to the back of the hood.
If necessary (if the wall is not perfectly vertical or if it is partially tiled) fit two spacers **D** in correspondance with the final fixing holes (snap-fitting).
 - Trace a centre line on the wall to facilitate installation (**1**), position the drilling template on it so that the central line printed on the template matches the central line marked on the wall and the bottom part of the template is aligned with the bottom of the hood when mounted (**2**).
 - Drill two holes (\varnothing 8 mm) and fix the support bracket to the wall using two wall plugs and screws (**3**).
 - Remove the steam deflector and take out the grease filter (see relevant paragraph).
 - Hang the hood (**4**), adjust its position (**5-6**) and from the inside of the hood mark two points for final fastening (**7**), remove the hood and drill two holes (\varnothing 8 mm) (**8**), insert two wall plugs, hang the hood again and fasten it to the wall with two screws (**9**).
 - Carry out the electrical connection (**10**), but leave the hood disconnected from the main power supply.
 - If the hood is to be used in the extractor version, fit the collar supplied on the hood outlet (**IIA** - extractor version - also install an exhaust pipe of suitable diameter) in place of the deflector (**IIF** - filter version).
 - Fit the grease filter, fit and close the steam deflector.
- Warning!** If the hood is to be used in the extractor version, remove the carbon filter if there is one, along with the fixing elements (behind the grease filter - see relevant paragraph).
If the hood is to be used in filter version, check that the carbon filter has already been fitted at the back of the grease filter, and if this is not the case, purchase a carbon filter and fit it.
- Connect the hood to the main power supply.

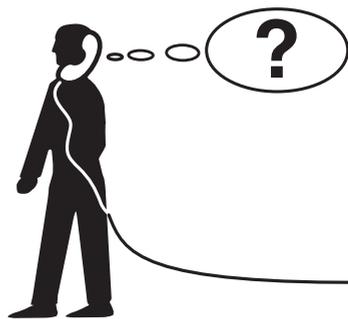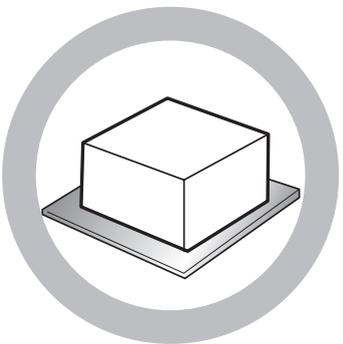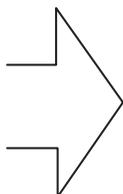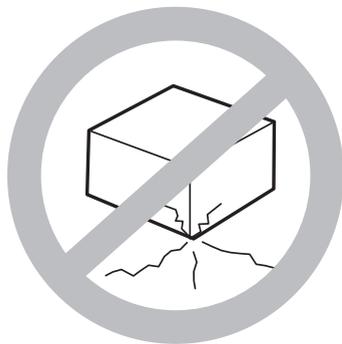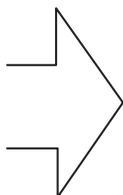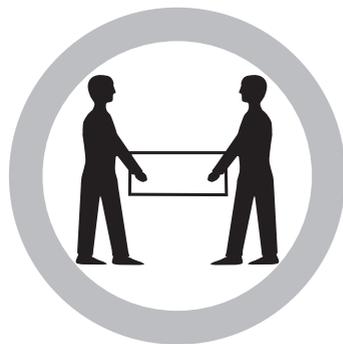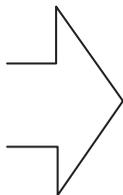

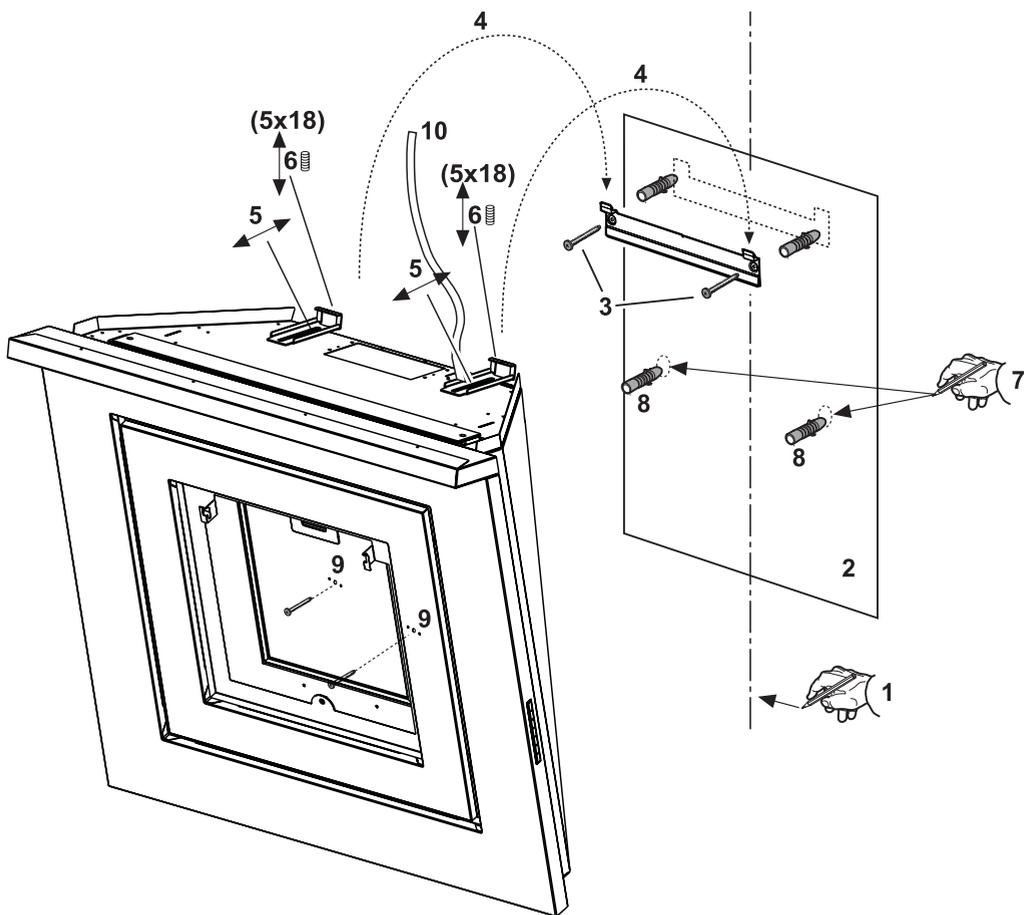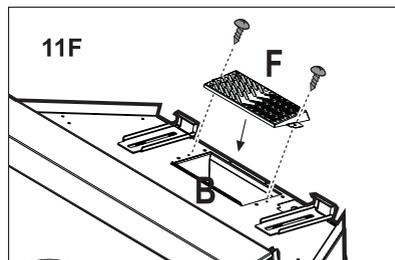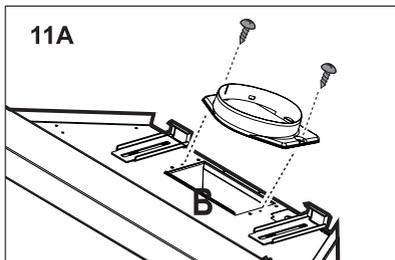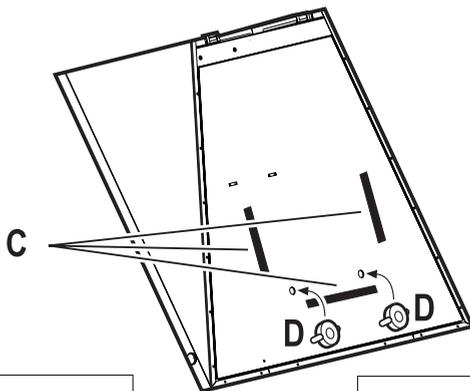

SAFEGUARDING THE ENVIRONMENT

1. Packing

Packing materials are 100% recyclable and are marked with the recycling symbol ♻️. Comply with the local regulations for disposal. The packing materials (plastic bags, polystyrene, etc.) are a potential source of danger and must be kept out of the reach of children.

2. Product

This appliance is marked in compliance with European Directive 2002/96/EC, Waste Electrical and Electronic Equipment (WEEE). By ensuring that this appliance is correctly scrapped, the user can help prevent potentially harmful consequences for the environment and the health of people.

The symbol  on the product or the accompanying documentation indicates that this product should not be treated as domestic waste but must be taken to a suitable collection centre for the recycling of electrical and electronic equipment. Disposal must be carried out in compliance with local regulations on waste disposal.

For further information on the treatment, recovery and recycling of this product, contact the competent local office, the household waste collection service or the shop where you purchased the appliance.



IMPORTANT INSTRUCTIONS FOR SAFETY

⚠️ WARNING: To reduce the risk of accidents, electric shock, injury or damage, when using the hood comply with the basic precautions, including the following.

1. Always disconnect the hood from the power supply before carrying out any installation or maintenance operation on the appliance.
2. Installation must be carried out by a specialised technician, in compliance with the manufacturer's instructions and local safety regulations.
3. Earthing of the appliance is compulsory. (Not possible for Class II hoods).
4. Never use multisockets and extension leads.
5. The electrical components must no longer be accessible to the user after installation.
6. Do not touch the hood with wet parts of the body or use it when barefoot.
7. Do not pull the appliance power cable to unplug it.
8. After-sales service – do not repair or replace any part of the hood unless specifically indicated in the manual. All other maintenance services must be carried out by a specialised technician.
9. When drilling the wall, make sure not to damage the electrical connections and/or pipes.
10. The ventilation ducts must always discharge to the outside.
11. The Manufacturer declines any liability for improper use or incorrect setting of the controls.

12. The appliance is not intended for use by children or persons with limited physical, sensory or mental abilities or without experience and knowledge of it, unless they are under the supervision of or instructed in its use by a person responsible for their safety.
13. Keep children away.
14. To reduce the risk of fire, only use a metal inlet duct.
15. Children must be supervised so that they do not play with the appliance.
16. The product must be disposed of in compliance with local regulations on waste disposal.
17. For further information on the treatment, recovery and recycling of this product, contact the competent local office, the household waste collection service or the shop where you purchased the appliance.
18. Regular cleaning and maintenance is essential for correct hood operation and good performance. Frequently clean all encrustations from dirty surfaces to prevent the accumulation of grease. Regularly clean or replace filters.
19. Do not "flambé" food under the hood. Naked flames could cause a fire.
20. The room must have adequate ventilation when the hood is used at the same time as appliances operating on gas or other fuels.
21. The discharge air must not be eliminated in a duct used to remove fumes produced by appliances operating on gas or other fuels, but must have a separate outlet. All the national regulations on air discharge envisaged by art. 7.12.1 of CEI EN 60335-2-31 must be observed.
22. If the hood is used together with other appliances operating on gas or other fuels, the negative pressure in the room must not exceed 4 Pa (4×10^{-5} bar). Therefore, make sure the room is adequately ventilated.
23. Do not leave pans unattended when frying, since the cooking oil could catch fire.
24. Make sure the lamps are cold before touching them.
25. The hood is not a shelf, therefore do not overload or place objects on it.
26. Do not use or leave the hood without its lamps correctly installed - risk of electric shock.
27. Wear work gloves for all installation and maintenance operations.
28. The product is not suitable for outdoor use.
29. The air sucked by the hood must not be eliminated through the same flue of the heating system or other appliances using gas or other fuels.

Electrical connection

The mains voltage must match that given on the rating plate located inside the hood. If provided with a plug, connect the hood to a socket complying with the current regulations and located in an accessible area. If it does not have a plug (direct connection to the power supply) or if the plug is not in an accessible place, fit a suitable double-pole switch that ensures complete disconnection from the power supply in category III overvoltage conditions, complying with the installation rules.

⚠ WARNING: Power cable replacement must be carried out by an authorised Service Centre or a qualified person.

⚠ WARNING: Before reconnecting the hood circuit to the power supply and checking correct operation, always make sure the power cable is correctly fitted and that it was NOT crushed in its housing during installation. Make sure to have this operation carried out by a specialised technician.

Cleaning the hood

⚠ WARNING! Failure to remove oil/grease (at least once a month) could result in fire.

Use a soft cloth with a neutral detergent. Never use abrasive substances or alcohol.

Before using the hood

Please read these instructions carefully and keep them for future reference, in order to ensure best use of your hood.

The packing materials (plastic bags, polystyrene, etc.) are a potential source of danger and must be kept out of the reach of children.

Make sure the hood has not been damaged during transport.

Declaration of conformity

This product has been designed, manufactured and put on the market in conformity with:

- safety objectives of the "Low Voltage" Directive 2006/95/EC (which replaces 73/23/EEC as amended)
- protection requirements of "EMC" Directive 89/336/EEC amended by Directive 93/68/EEC.

Troubleshooting guide

If the hood does not work:

- Is the plug properly inserted in the power socket?
- Is there a power failure?

If the hood is not extracting enough:

- Is the right speed selected?
- Do the filters need cleaning or replacing?
- Are the air outlets blocked?

If the lamp does not work:

- Does the lamp need replacing?
- Is the lamp correctly fitted?

AFTER-SALES SERVICE

Before calling the After-Sales Service

1. Check to see if you can fix the problem yourself (see "Troubleshooting Guide").
2. Switch the appliance off and then on again to check if the problem has been eliminated.
3. If the problem persists, contact the After-Sales Service.

Specify:

- the type of fault,
- the product model given on the dataplate inside the hood, visible on removing the grease filters,
- your full address,
- your telephone number and area code,
- the Service code (the number under the word SERVICE on the dataplate inside the hood, behind the grease filter).

If any repairs are necessary, contact an authorised Service Centre (to ensure the use of original spare parts and correct repair).

Failure to comply with these instructions can compromise the safety and quality of the product.

SERVICE



0000 000 00000

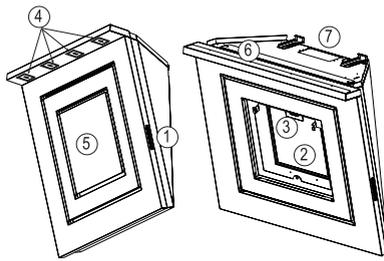


Fig.1

1. Control panel
2. Grease filter
3. Grease filter release handle
4. Halogen bulb
5. Steam deflector
6. Neon light (only certain models)
7. Air outlet

Steam deflector (Fig. 2)

The steam deflector must always be left closed, and should only be opened to carry out maintenance (e.g. Cleaning or changing the filters).

Opening the steam deflector:

To open the steam deflector, pull the bottom part (the pins at the centre will disconnect-A), lift the deflector slightly (B) to allow the side pins to come out of their slots (X) To fit and close, proceed in reverse order.

Grease filter

This should be washed once a month either by hand or in a dishwasher at a low temperature and with short cycle. Cleaning in a dishwasher may cause the metal grease filter to discolour, but this in no way affects its filtering efficiency.

To remove the grease filter - Fig. 3

Remove the steam deflector.

Pull the handle downwards and extract the filter.

Carbon filter (filter version only)

Retains any unpleasant odours produced during cooking.

The carbon filter can be washed every two months in hot water and a suitable detergent or in a dishwasher at 65°C (when washing in a dishwasher, run a complete cycle without any dishes).

Remove excess water without damaging the filter, then remove the wadding within the plastic frame and put it in the oven at 100°C for 10 minutes to dry it out completely.

Replace the wadding every 3 years or whenever it is seen to be damaged.

• Assembly - Fig. 4

Remove the steam deflector and take out the grease filter.

Install the carbon filter behind the grease filter and fasten with two fixing elements.

Warning! The fixing elements are included in the carbon filter pack, not with the hood.

- To remove the filter, proceed in reverse order.

Changing lamps

Disconnect the hood from the mains power supply.

! WARNING: Wear gloves.

Before doing so, check that the lamps have cooled down.

Halogen lamps (detail No. 4): press at the point marked PUSH, open, remove the old lamp and replace it with another that has the same characteristics. **Caution:** the halogen lighting unit must be opened completely, otherwise it will not close again.

Neon lamp (detail No. 6): open the lighting unit by unfastening the 2 screws and change the neon lamp (only certain models).

If the lamps are not working, check that they are fitted properly in place before contacting the After Sales Service.

CONTROL PANEL

Light switch: press **rapidly** for partial lighting, **twice** for full lighting. Press again to turn the lights off.

Press and hold, for at least two seconds, to turn the secondary lighting system on; press again for one second to turn it off.

Motor switch: Press to turn the hood on and off. Once it has been turned on, the hood will operate at the speed selected previously.

Speed 1.

Speed 2.

Speed 3.

Intensive speed: maintains intensive speed for 5 minutes, after which the hood returns to the speed set previously.

Timer: press to use the following timer functions:

Speed 1 for 20 minutes.

Speed 2 for 15 minutes.

Speed 3 for 10 minutes.

Intensive speed for 5 minutes.

When the timer function expires the hood switches itself off.

Press or to come out of the function.

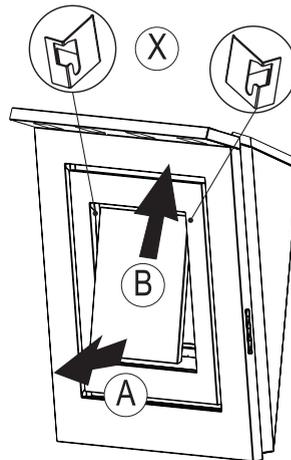


Fig.2

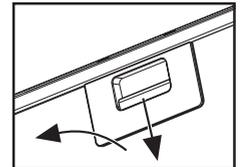


Fig.3

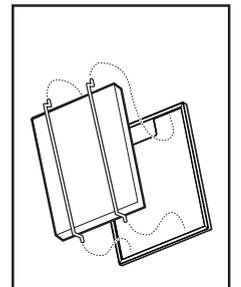


Fig.4

Cleaning the hood

Always wait until the hood has cooled down before cleaning it!

Warning! Failure to remove oil and grease (at least once a month) could lead to fire.

Use a soft cloth with a neutral detergent. Never use abrasive substances or alcohol.

BEFORE USING THE HOOD

Please read these instructions carefully and keep them for future reference, in order to ensure best use of your hood.

Packaging materials can be dangerous for children. Keep packaging materials (plastic bags, polystyrene, etc.) well out of their reach.

Make sure the hood has not been damaged during transport. Installation and electrical connections must be carried out by a qualified technician in compliance with the current local regulations.